


# GETTING STARTED

## Flood Sensor

This sensor is always monitored to alert you of leaks or flood conditions, even when your system is disarmed.

Follow the instructions below to get set up and protected:

- 1 Place the Flood Sensor in a flood-prone area such as a basement or near appliances such as a washing machine, water heater, or sump pump.
- 2 The sensor should be placed with the metal prongs and serial number facing down.

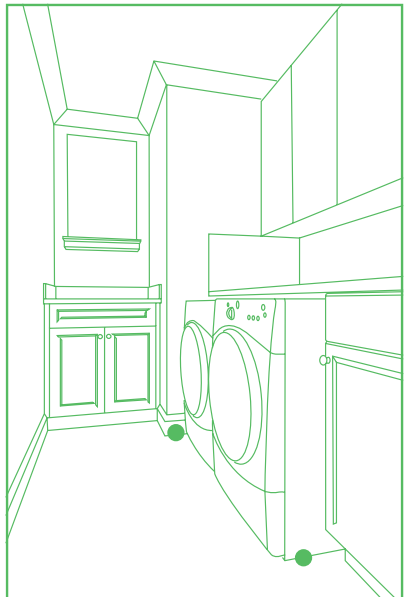

**NEED HELP? [WWW.FRONTPOINT.COM/HELP](http://WWW.FRONTPOINT.COM/HELP)**