




Frontpoint®



KEYCHAIN REMOTE

Instruction Manual


Please **click on your panel** for corresponding information:

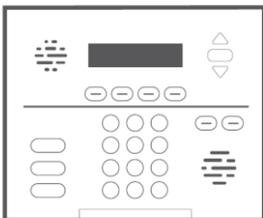

Frontpoint
Simon XT




Frontpoint Hub

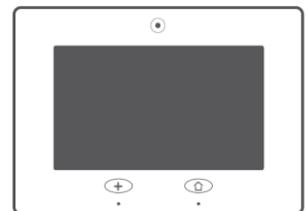

Frontpoint
IQ Panel



Frontpoint Hub

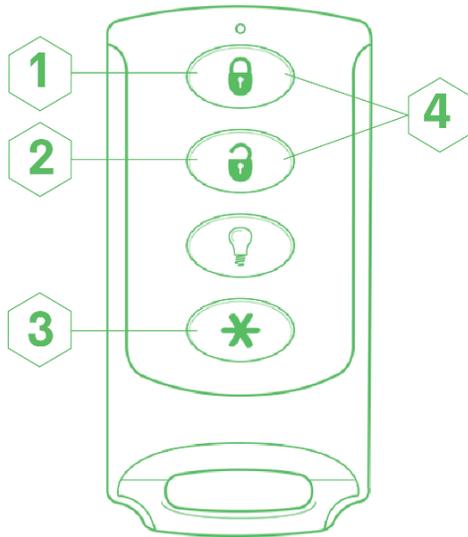

Button functions:

- 1** Press once to **Arm Away** (arms all sensors)
- 2** Press once to **Disarm**
- 3** Press once to **Arm Stay** (arms only door/window and glass break sensors)
- 4** Press together **1** and **2** for three seconds to trigger an audible **Panic Alarm** and police will be dispatched to your home.

Pro Tips:

- If you wish to change the functionality of **4** to alert medical responders instead of the police, please call 877-602-5276 to reconfigure. (A silent panic alarm is also possible.)
- Although the light bulb button does not currently have a function, we suggest an alternative of setting a scene from your app to turn the light on/off as you arm/disarm your system.
- The Keychain Remote should have an effective range of ~100 ft from your Hub.
- The expected battery life is five years. A low battery will be indicated by a dim or nonexistent LED light at the time a button is pushed.
- If the Keychain Remote has not been used recently it is possible for the battery to deplete entirely before being able to report a low battery signal to your Hub.

Replacing the Battery:

1. With a key or small screwdriver, press the black tab located at the bottom of the remote (fig. 1) and slide the chrome trim off.
2. Carefully separate the front and back piece of plastic to reveal the battery.
3. Replace with a **3V Lithium CR2032** battery ensuring the + side of the battery faces up (fig. 2).
4. Re-assemble the plastics and ensure they click together. Ensure the notch in the chrome trim is aligned with the back of the plastic. It will only go on one way (fig. 3).



Figure 1

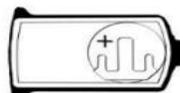



Figure 2



Figure 3



Frontpoint Simon XT

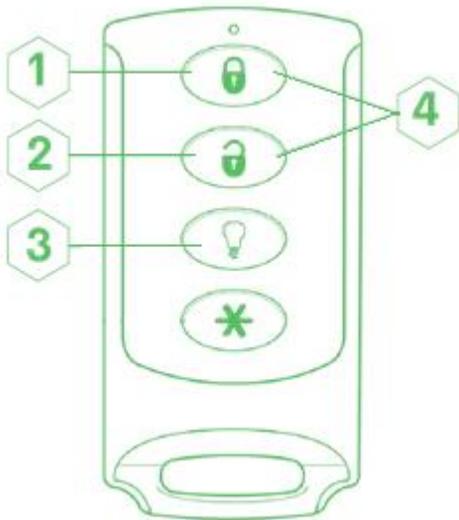

Button functions:

- 1** Press once to **Arm Stay** (arms only door/window and glass break sensors) and twice to **Arm Away** (arms all sensors)
- 2** Press once to **Disarm**
- 3** Press once to toggle on/off any Z-wave Lights.
- 4** Press **1** and **2** together for three seconds to trigger an audible **Panic Alarm** and police will be dispatched to your home.

Pro Tips:

- If you wish to change the functionality of **4** to alert medical responders instead of the police, please call 877-602-5276 to reconfigure. (A silent panic alarm is also possible.)
- The Keychain Remote should have an effective range of ~100 ft from your Hub.
- The expected battery life is five years. A low battery will be indicated by a dim or nonexistent LED light at the time a button is pushed.
- If the Keychain Remote has not been used recently it is possible for the battery to deplete entirely before being able to report a low battery signal to your Hub.

Replacing the Battery:

1. With a key or small screwdriver, press the black tab located at the bottom of the remote (fig. 1) and slide the chrome trim off.
2. Carefully separate the front and back piece of plastic to reveal the battery.
3. Replace with a **3V Lithium CR2032** battery ensuring the + side of the battery faces up (fig. 2).
4. Re-assemble the plastics and ensure they click together. Ensure the notch in the chrome trim is aligned with the back of the plastic. It will only go on one way (fig. 3).



Figure 1

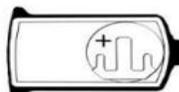



Figure 2



Figure 3



Frontpoint IQ Panel

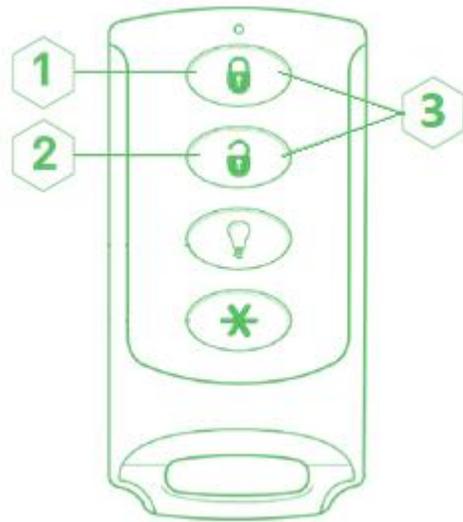

Button functions:

- 1** Press once for **Arm Stay** (arms only door/window and glass break sensors) twice to **Arm Away** (arms all sensors)
- 2** Press once to **Disarm**
- 3** Press **1** and **2** together for three seconds to trigger an audible **Panic Alarm** and police will be dispatched to your home.

Pro Tips:

- If you wish to change the functionality of **3** to alert medical responders instead of the police, please call 877-602-5276 to reconfigure. (A silent panic alarm is also possible.)
- Although the light bulb button does not currently have a function, we suggest an alternative of setting a scene from your app to turn the light on/off as you arm/disarm your system.
- The Keychain Remote should have an effective range of ~100 ft from your Hub.
- The expected battery life is five years. A low battery will be indicated by a dim or nonexistent LED light at the time a button is pushed.
- If the Keychain Remote has not been used recently it is possible for the battery to deplete entirely before being able to report a low battery signal to your Hub.

Replacing the Battery:

1. With a key or small screwdriver, press the black tab located at the bottom of the remote (fig. 1) and slide the chrome trim off.
2. Carefully separate the front and back piece of plastic to reveal the battery.
3. Replace with a **3V Lithium CR2032** battery ensuring the + side of the battery faces up (fig. 2).
4. Re-assemble the plastics and ensure they click together. Ensure the notch in the chrome trim is aligned with the back of the plastic. It will only go on one way (fig. 3).



Figure 1

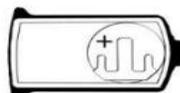


Figure 2



Figure 3